


HIGH PRESSURE BALL VALVE

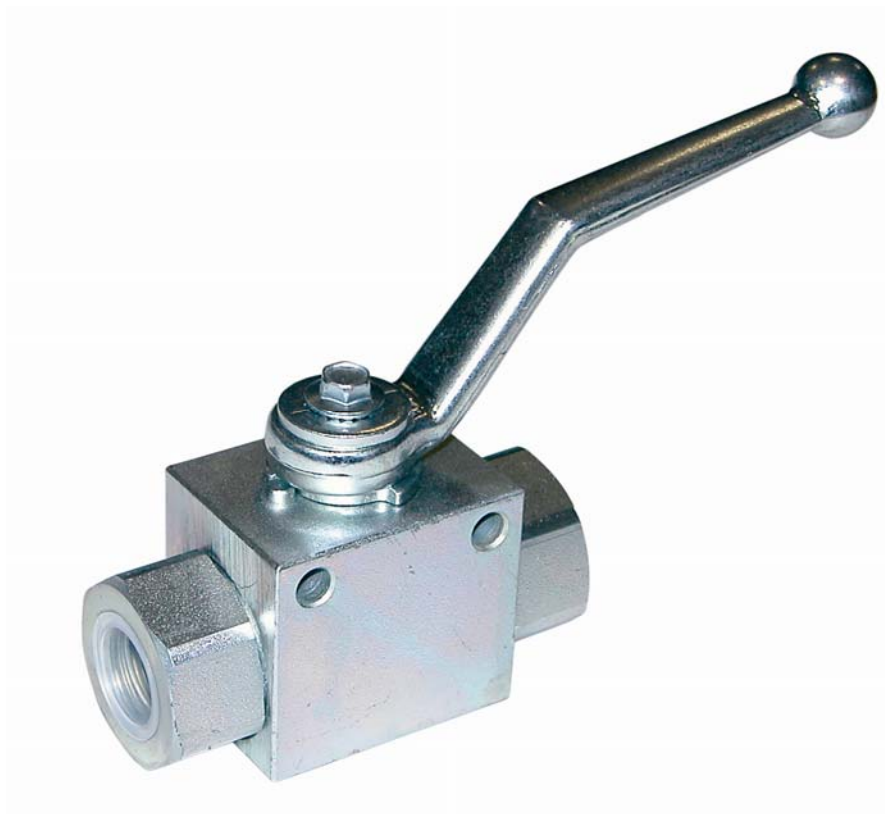

Size : DN 1/4" to 1 1/4"
Ends : Threaded Female BSP
Min Temperature : -10°C
Max Temperature : + 100°C
Max Pressure : 315 – 500 Bars
Specifications : Reduce bore
High pressure
Hydraulic type

Materials : Galvanized steel

HIGH PRESSURE BALL VALVE


SPECIFICATIONS :

- Reduce bore
- Galvanized steel
- High pressure
- Hydraulic type

USE :

- For all common fluids
- Min and max Temperature Ts : -10°C to + 100°C
- Max Pressure PN : 500 bars DN1/4" to 1/2" and 315 over (see graph)

PRESSURE / TEMPERATURE GRAPH (STEAM EXCLUDED) :

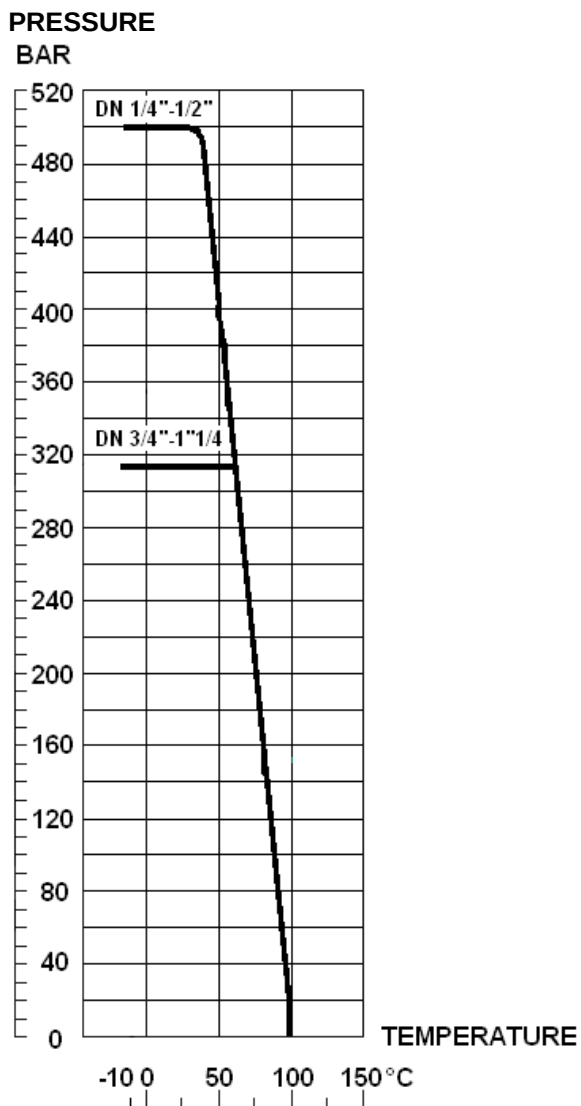

HIGH PRESSURE BALL VALVE


RANGE :

- Galvanized steel **Ref. 799** DN 1/4" to 1 1/4"

ENDS :

- Threaded cylindric female BSP


MATERIALS :

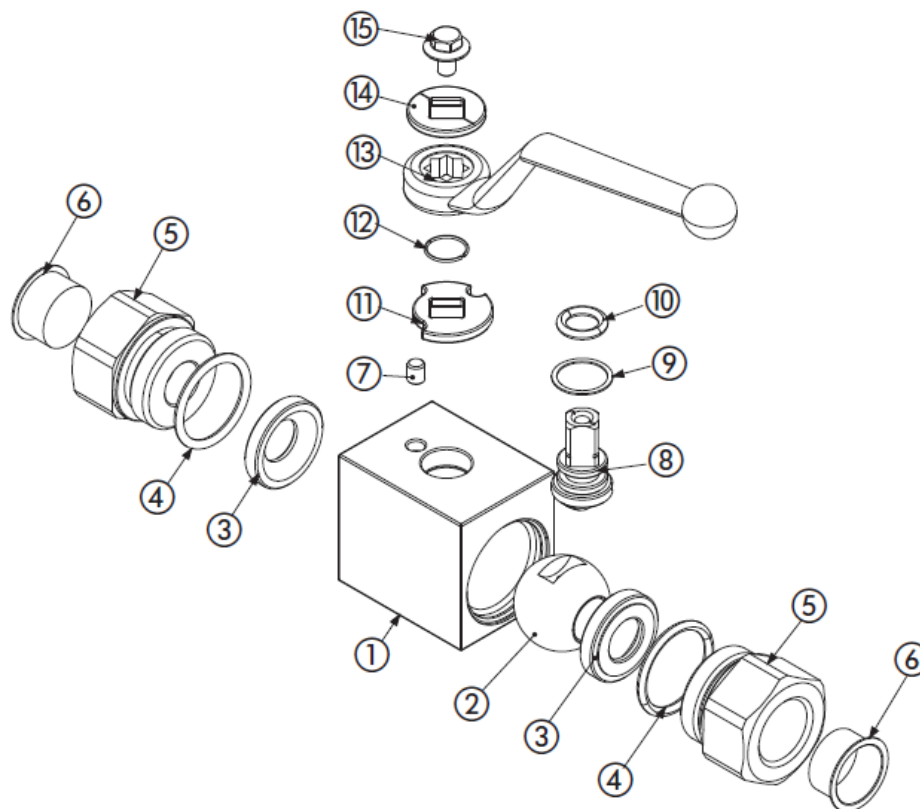

Item	Designation	Materials
1	Body	Galvanized 1.0737 steel
2	Ball	Chromed 1.0737 steel
3	Seat	POM
4	O-ring	NBR
5	Ends	Galvanized 1.0737 steel
6	Caps	PVC
7	Spine	Steel 1.0737
8	Stem	Steel 1.0737
9	Stem seal	POM
10	O-ring	NBR
11	Washer	Steel 1.0116
12	Seeger	Steel 1.4301
13	Handle	Aluminium
14	Handle washer	Steel 1.0116
15	Handle screw	Steel DIN 6921 8.8


HIGH PRESSURE BALL VALVE

SIZE (in mm) :

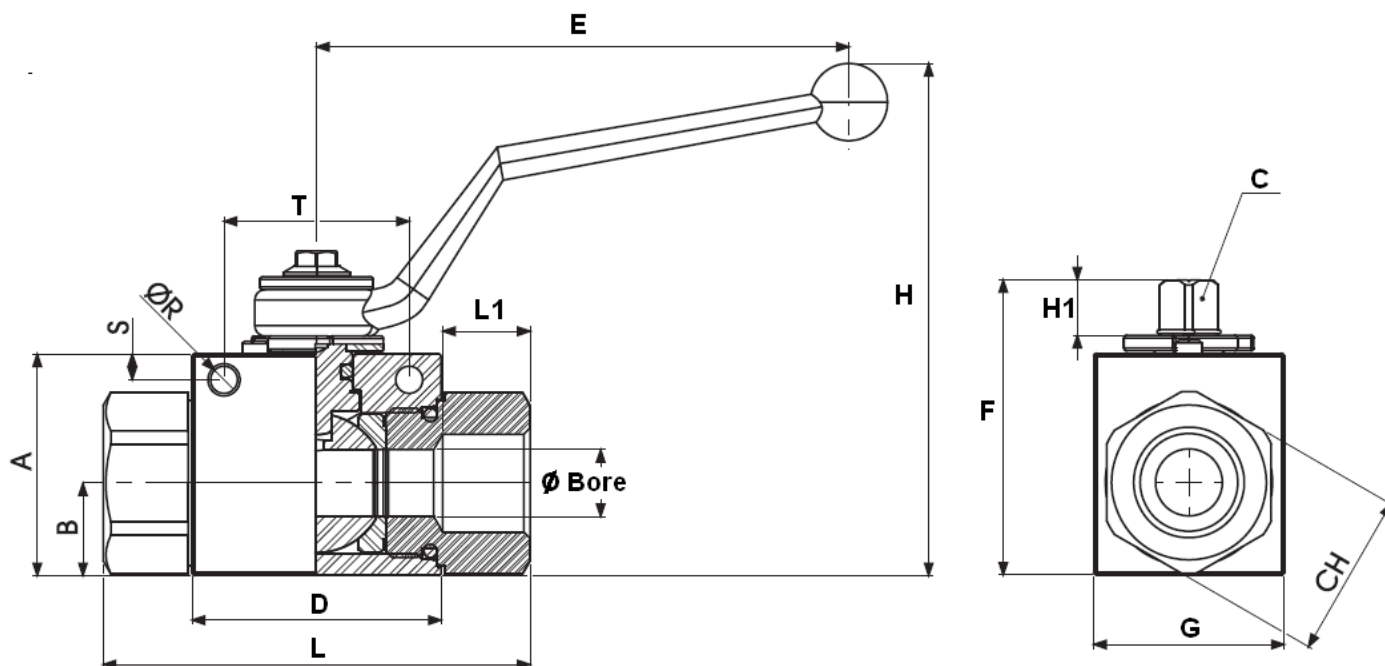

Stem size :

		DN	1/4"	3/8"	1/2"	3/4"	1"	1 1/4"
Ref. 799	Ø Bore	6	10	13	20	25	25	
	L	71	73	83	95	112	120	
	L1	15.5	15.5	17	21	24	24	
	E	110	110	110	180	180	180	
	H	91.5	96.5	99.5	106.5	116.5	116.5	
	H1	11	11	11	14	14	14	
	A	35	40	43	55	65	65	
	B	14.5	17.4	18	23.4	29.5	29.5	
	C	9	9	9	14	14	14	
	CH	24	30	32	41	50	55	
	D	42.4	44.4	48.4	62.5	66.5	66.5	
	F	49	54.25	57	73.5	83.5	83.5	
	G	30	35	37	45	55	55	
	Ø R	5.25	5.25	5.25	6.25	6.25	6.25	
	S	4.5	4.5	5	6	6	6	
	T	34	34	36	50	50	50	
Weight (Kg)		0.49	0.644	0.757	1.438	2.223	2.273	

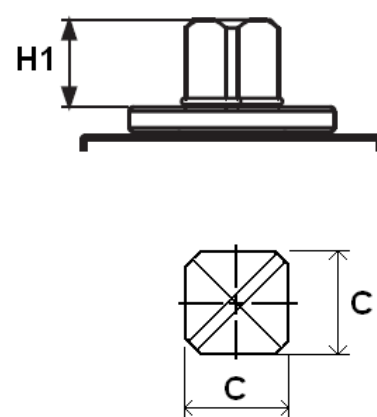

HIGH PRESSURE BALL VALVE

TORQUE VALUES (in Nm without safety coefficient) :

DN	1/4"	3/8"	1/2"	3/4"	1"	1 1/4"
Torque (Nm)	16	18	25	45	72	90

STANDARDS :

- Fabrication according to ISO 9001
- DIRECTIVE 97/23/CE : Products excluded from directive (Article 3, § 3)
- Tests according to API 598
- Threaded cylindric BSP ends according to ISO 228-1
- ATEX according to article 8 1bII from directive 94/9/CE (N°TUV IT 07 ATEX 002 AR, optional marking)

ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages.
 The customer must check the right choice of the products with the real service conditions.

INSTALLATION AND MAINTENANCE

BEFORE INSTALLATION :

Pipe-line must be cleaned and free from residual of weldings, rubbish, shaving and every kind of extraneous materials.
 Pipe-line must be perfectly aligned and their support properly dimensioned so that there's no external constraint.

Please use the right product according to the services conditions to seal the valve.
 Use the right bolt tightening so that the ends won't be damaged.

CLEANING AND TESTS

Keep closed the valves during the cleaning operation so that there's no impurities between the ball and the body.

Tests under pressure must be done with a cleaned pipe-line.

Open partially the valve for tests. Pressure test do not exceed the valve specifications according to API 598.

MAINTENANCE

It's recommended to operate the valve twice (open and close) 1 to 2 times per year.

When intervention on the valve, be sure there's no pressure in the pipe-line, there's no fluid in it, and that it is isolated.
 The temperature must be low enough to operate without risks.
 If there's a corrosive fluid, inert installation before intervention.