

WAFER BUTTERFLY VALVE



Size : DN 32 to 1400 mm
Ends : Between flanges GN10/16 and ASA150
Min Temperature : - 10°C (with EPDM seat)
Max Temperature : + 90°C (with EPDM seat, temporarily 110°C)
Max Pressure : 16 Bars up to DN200
Specifications : Long neck for isolation
 Wafer type
 Full crossing stem
 Iso 5211 mounting pad

Materials : Cast iron EN GJS 500-7 body

WAFER BUTTERFLY VALVE

SPECIFICATIONS :

- Long neck for isolation
- ISO 5211 mounting pad
- Wafer type
- Between flanges GN10/16 and ASA150 up to DN400 included (over on request)
- Between flanges GN10 from DN450 to DN1400
- Full crossing stem
- Removable seat
- Stainless steel disc up to DN100
- 9 positions lever with locking device up to DN200 , stop in all positions but non lockable from DN250 to 300
- Rilsan coated body color RAL 5024 , 250-300 microns thickness
- Stem extension 75 mm length (option)
- Square lever 30x30 mm for special key (option)

USE :

- Fluids : Depending of the seat
- Min and max Temperature Ts : Depending of the seat
- Max Pressure Ps : 16 bars up to DN200 , 10 bars over

RANGE :

- With lever from DN 32 to DN 300
- Naked stem from DN 350 to DN1400
- Gear box possible (**Ref. 1197**) from DN 32 to DN 1400
- On request, chain gear box (**Ref. 98662**) from DN 32 to DN 500
- On request, stem extension with special length (**Ref. 98665**)

ENDS :

- Between flanges GN10-GN16 and ASA 150 up to DN400
- Between flanges GN10 from DN 450 to DN1400

TORQUE VALUES (in Nm with safety coefficient of 30 % included) at 10 Bars :

DN	32/40	50	65	80	100	125	150	200	250	300	350	400
Torque (Nm)	9	11	20	29	47	82	130	210	360	475	760	1300

DN	450	500	600	700	750	800	900	1000	1100	1200	1300	1400
Torque (Nm)	1600	2340	3300	4600	5800	7400	11000	13600	14200	16400	17800	19200

FLOW COEFFICIENT Kv (m3 / h) :


DN	32/40	50	65	80	100	125	150	200	250	300	350	400
Kv (m3/h)	70	109	200	334	551	901	1427	2383	3825	5659	8177	10659

DN	450	500	600	700	800	900	1000	1200	1300	1400
Kv (m3/h)	12562	16021	22737	32443	43263	53873	64407	97341	119770	129808

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr

WAFER BUTTERFLY VALVE

HEAD LOSS GRAPH :

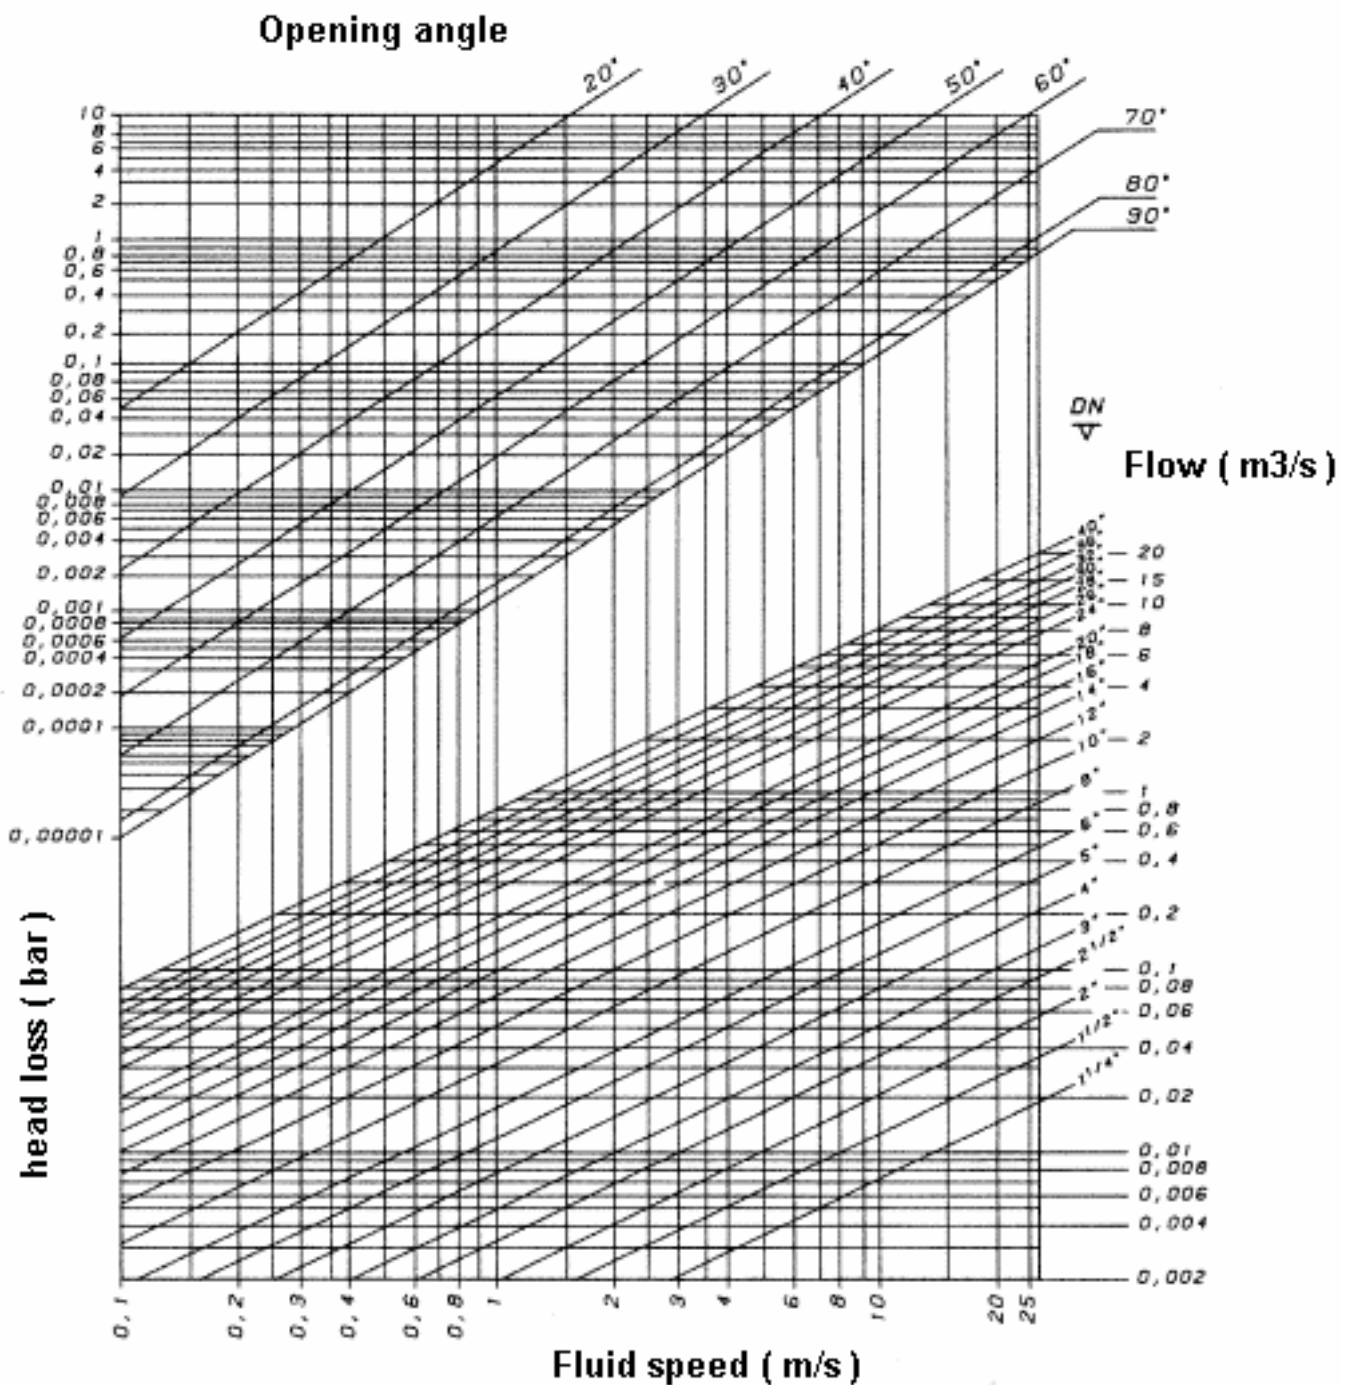

WAFER BUTTERFLY VALVE

COMPATIBILITY :

MATERIALS	TEMPERATURES	APPLICATION	NOT ADVISABLE
EPDM	-10°C to + 90°C (temporarily 110°C)	Cold and hot water, sea water, alcohol, hydroxyd of soda, demineralized water, mercury, alcalins ...	Hydrocarbon, steam, gas, acids, oil, freon ...
EPDM HT	-10°C to + 110°C	Cold and hot water, sea water, alcohol, hydroxyd of soda, demineralized water, mercury, alcalins ...	Hydrocarbon, steam, gas, acids, oil, freon ...
BUNA N	-10°C to + 80°C	No aromatic hydrocarbon, natural gas, grease, oil, compressed air, glycol, water, fuel ...	Gas in atmospheric condition
HYPALON	-10°C to + 80°C	Mineral Acids, oxydizing fluids	Acetone, fuel, toluene, acetylene, nitric acid
FKM	-5°C to + 180°C	Acids, greased, hydrocarbon, fuel, oil, gas	Steam, hot water (130°C max), freon, alcali, acetylene
NATURAL RUBBER	-10°C to + 60°C	Abrasive product, acetone, alcoho	Acids and hydrocarbon
SILICONE	-30°C to + 150°C	Air or inerted gas, high temperature	Steam and hot water (100°C max), solvent
ALIMENTARY SILICON	-30°C to + 150°C	Food	Other applications


The above information are given with sincerity and are result of a long experience.
 Each case is particular and they can not engage our responsibility.
 We advise to proceed with real condition use trials.

OTHER MODELS ON REQUEST :

BODY	STEM	DISC	ELASTIC RING	HANDLING
Cast iron GS	SS 420	Cast iron GS	EPDM	Lever
Carbon steel	SS 304	Carbon steel	BUNA N	SS lever
SS 304	SS 316	SS 304	FKM	Gear box
SS 316	Hastelloy	SS 316	Hypalon	SS gear box
Bronze aluminium	Others alloy	Aluminium bronze	Silicone	Chain gear box
Aluminium		Aluminium	Alimentary silicone	Electric
Bronze		Bronze	Steam Silicone	Pneumatic
Other alloy		Uranus B6	White NBR	Stem extension on request
Special Coated		SS 316 polished	Carbox NBR	
Dry cleaned		Halar coated	Natural rubber	
Special paint		Hastelloy	Neoprene	
		Other alloy	Nordel	
		Vulcanized		

WAFER BUTTERFLY VALVE

MATERIALS DN 32 - 200 :

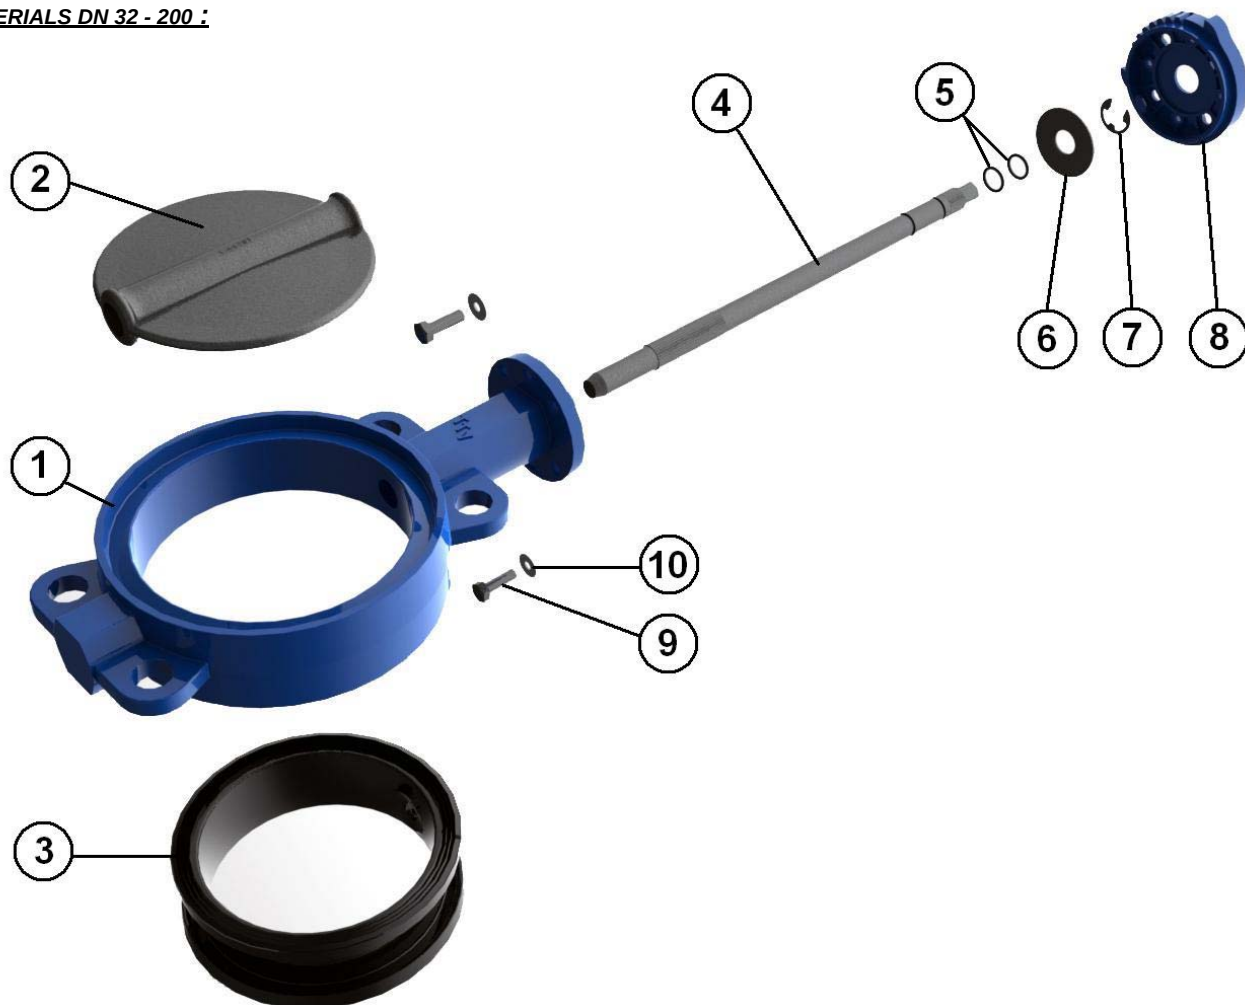

		Materials							
Item	Designation	1150	1151	1152	1153	1154	1156	1157	1158
1	Body	Cast iron EN GJS-500-7							
2	Disc DN32-100	SS 316	SS 316	SS 316	SS 316	SS 316	SS 316	SS 316	Alu bronze
2	Disc DN125-200	ENGJS500-7	SS 316	ENGJS500-7	SS 316	SS 316	SS 316	SS 316	Alu bronze
3	Elastic ring	EPDM	BUNA	BUNA	EPDM	FKM	White NBR	SILICONE	BUNA
4	Stem	SS 420	SS 304	SS 420	SS 304	SS 304	SS 304	SS 304	SS 304
5	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA
6	Ring	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
7	Circlips	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
8	Plate	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium	Aluminium
9	Plate screw	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6
10	Washer	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
	Lever	Aluminium							

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr

Date : 06/10


Page 5 sur 16

Rev.

Information provided as an indication and subject to possible modification

WAFER BUTTERFLY VALVE

MATERIALS DN 250 - 400 :

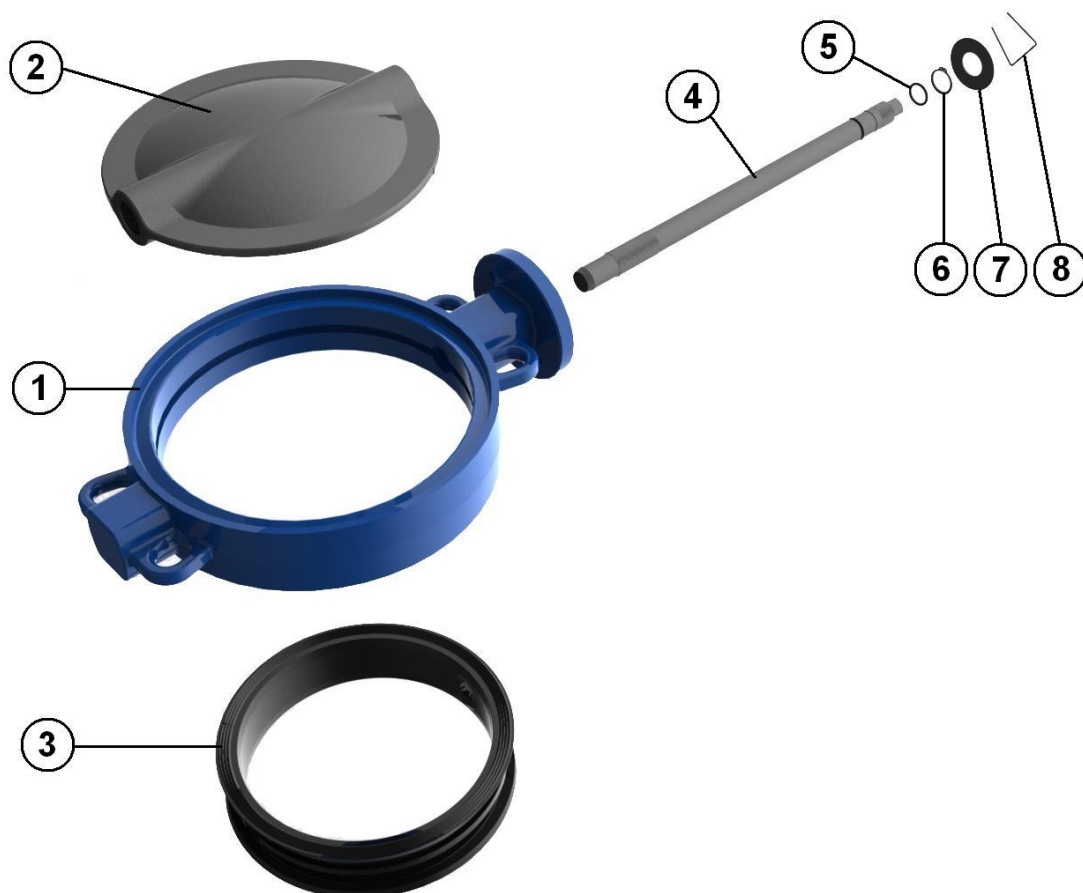

Item	Designation	Materials							
		1150	1151	1152	1153	1154	1156	1157	1158
1	Body	Cast iron EN GJS-500-7							
2	Disc	ENGJS500-7	SS 316	ENGJS500-7	SS 316	SS 316	SS 316	SS 316	Alu bronze
3	Elastic ring	EPDM	BUNA	BUNA	EPDM	FKM	White NBR	SILICONE	BUNA
4	Stem	SS 420	SS 304	SS 420	SS 304	SS 304	SS 304	SS 304	SS 304
5	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA
6	Circlips	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
7	Ring	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
8	Spring	Steel	Steel	Steel	Steel	Steel	Steel	Steel	Steel
Lever (up to DN300)		Aluminium							

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr

Date : 06/10


Page 6 sur 16

Rev.

Information provided as an indication and subject to possible modification

WAFER BUTTERFLY VALVE

MATERIALS DN 450 - 1400 :

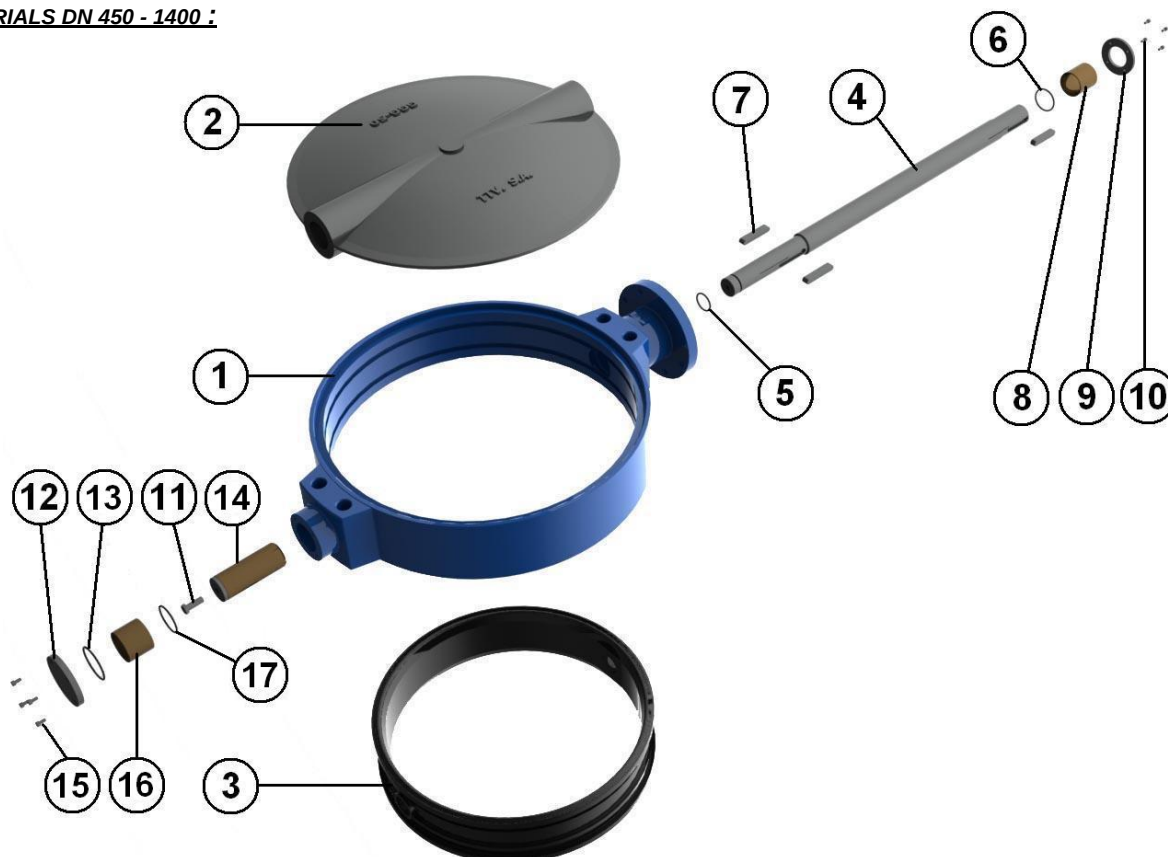

		Materials							
Item	Designation	1150	1151	1152	1153	1154	1156	1157	1158
1	Body	Cast iron EN GJS-500-7							
2	Disc	ENGJS500-7	SS 316	ENGJS500-7	SS 316	SS 316	SS 316	SS 316	Alu bronze
3	Elastic ring	EPDM	BUNA	BUNA	EPDM	FKM	White NBR	SILICONE	BUNA
4	Stem	SS 420	SS 304	SS 420	SS 304	SS 304	SS 304	SS 304	SS 304
5	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA
6	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA
7	Pin	ST - 60	ST - 60	ST - 60	ST - 60	ST - 60	ST - 60	ST - 60	ST - 60
8	Socket	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE
9	Ring	F1110	F1110	F1110	F1110	F1110	F1110	F1110	F1110
10	Screw	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6
11	Screw	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6
12	Cap	F1110	F1110	F1110	F1110	F1110	F1110	F1110	F1110
13	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA
14	Socket	F1110	F1110	F1110	F1110	F1110	F1110	F1110	F1110
15	Screw	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6
16	Socket	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE	BRONZE
17	O ring	EPDM	BUNA	BUNA	EPDM	FKM	NBR	EPDM	BUNA

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr

Date : 06/10

Page 7 sur 16


Rev.

Information provided as an indication and subject to possible modification

WAFER BUTTERFLY VALVE

SIZE GN10 (in mm) :

- Valves DN 32 - 400 :

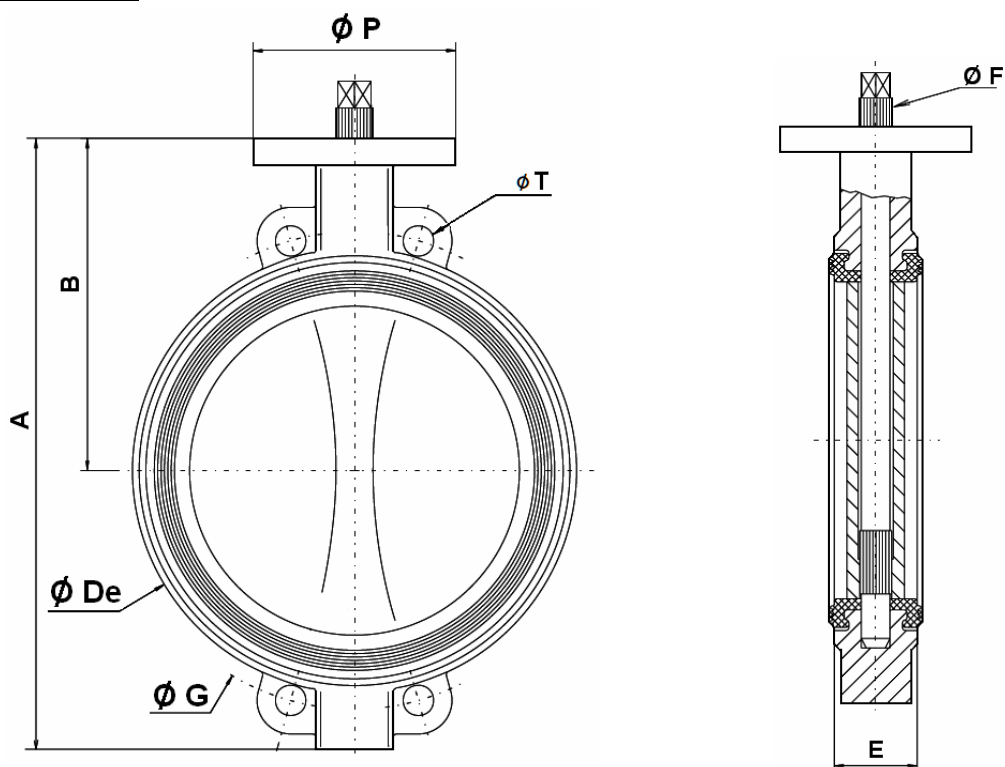




DN	32/40	50	65	80	100	125	150	200	250	300	350	400
A	206	228	243	266	294	324	349	438	461	523	582	645
B	140	156	162	170	185	207	216	256	248	280	300	340
ϕDe	82	102	119	135	155	185	208	270	328	381	437	486
E	33	43	46	46	52	56	56	60	68	78	78	102
ϕF	10.5	10.5	14.5	16.5	16.5	18.5	18.5	22.5	25.5	30.5	30.5	35.5
ϕG	110	125	145	160	180	210	240	295	350	400	460	515
ϕP	88	88	88	88	88	105	105	105	150	150	170	170
ϕT	18	18	18	18	18	18	23	23	23	23	23	27
Weight (Kg)	2.46	3.66	4.4	4.6	6	7.6	9.2	14.7	24.7	33	39	52

- Levers :

DN 40 – 100

DN 125 – 200

DN 250 - 300

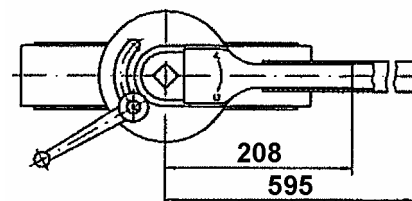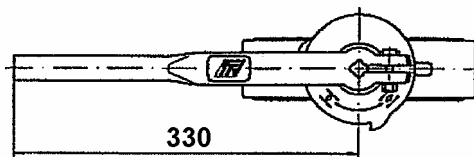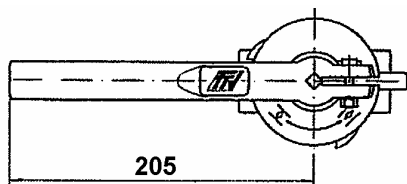

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.it E-mail: sferaco@sferaco.it

Date : 06/10

Page 8 sur 16


Rev.

Information provided as an indication and subject to possible modification

WAFER BUTTERFLY VALVE

SIZE GN10 (in mm) :

- Valves DN 450 - 1400 :

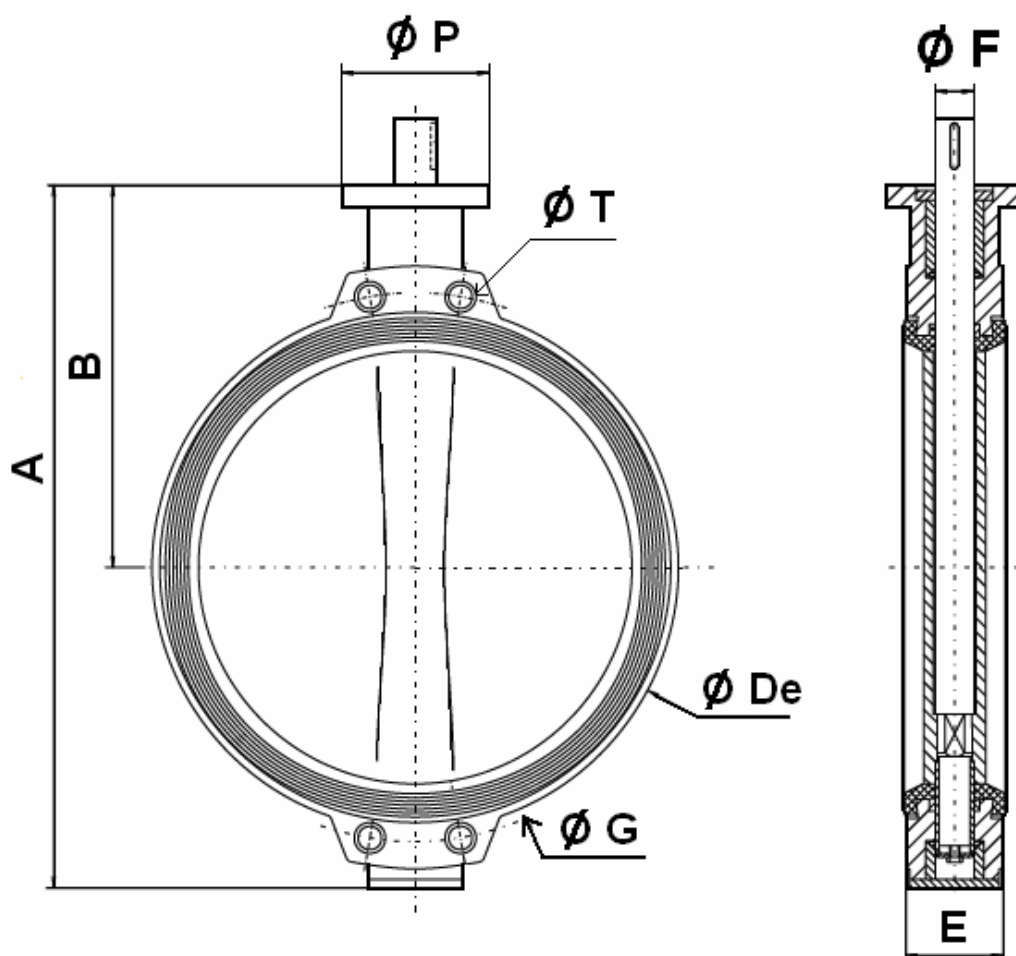

DN	450	500	600	700	750	800	900	1000	1100	1200	1300	1400
A	738	822	965	1100	1150	1248	1325	1457	1580	1720	1910	1990
B	394	440	507	575	600	655	685	754	815	873	1005	1025
$\varnothing De$	538	595	695	804	860	911	1010	1124	1225	1330	1460	1530
E	114	127	154	165	190	190	203	216	216	254	360	360
$\varnothing F$	50	50	60	60	65	65	80	80	80	100	120	120
$\varnothing G$	565	620	725	840	900	950	1050	1160	1270	1380	-	1590
$\varnothing P$	175	175	250	300	300	300	300	300	300	300	350	350
$\varnothing T$	M24	M24	M27	M27	M30	M30	M30	M33	M33	M36	-	M39
Weight (Kg)	87	117	177	258	296	330	505	661	840	1020	1650	1900

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr

Date : 06/10

Page 9 sur 16


Rev.

Information provided as an indication and subject to possible modification

WAFER BUTTERFLY VALVE

SIZE GN10 (in mm) :

- Valves with gear box DN 32 - 400 :

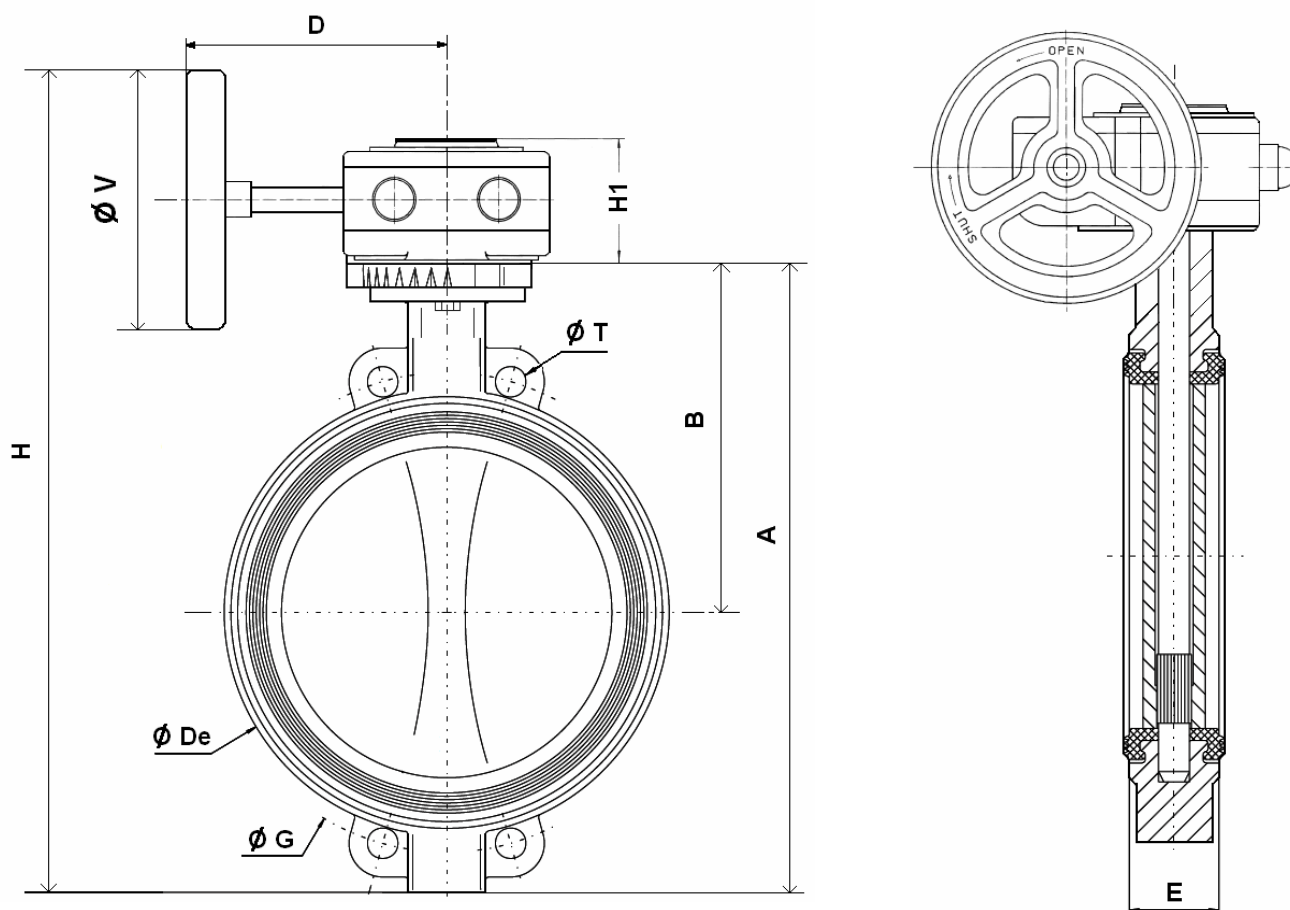


DN	32/40	50	65	80	100	125	150	200	250	300	350	400
A	206	228	243	266	294	324	349	438	461	523	582	645
B	140	156	162	170	185	207	216	256	248	280	300	340
ϕDe	82	102	119	135	155	185	208	270	328	381	437	486
D	120	120	120	120	120	136	136	136	223	223	345	345
E	33	43	46	46	52	56	56	60	68	78	78	102
H	304	326	341	364	392	452	477	566	647	709	831	894
H1	58	58	58	58	58	58	58	58	74	74	98	98
ϕG	110	125	145	160	180	210	240	295	350	400	460	515
ϕT	18	18	18	18	18	18	23	23	23	23	23	27
ϕV	140	140	140	140	140	200	200	200	300	300	400	400
Weight (Kg)	3.81	5.01	5.75	5.95	7.35	9.35	10.95	16.45	28.7	37	48.5	61.5

WAFER BUTTERFLY VALVE

SIZE GN10 (in mm) :

- Valves with gear box DN 450 - 1400 :

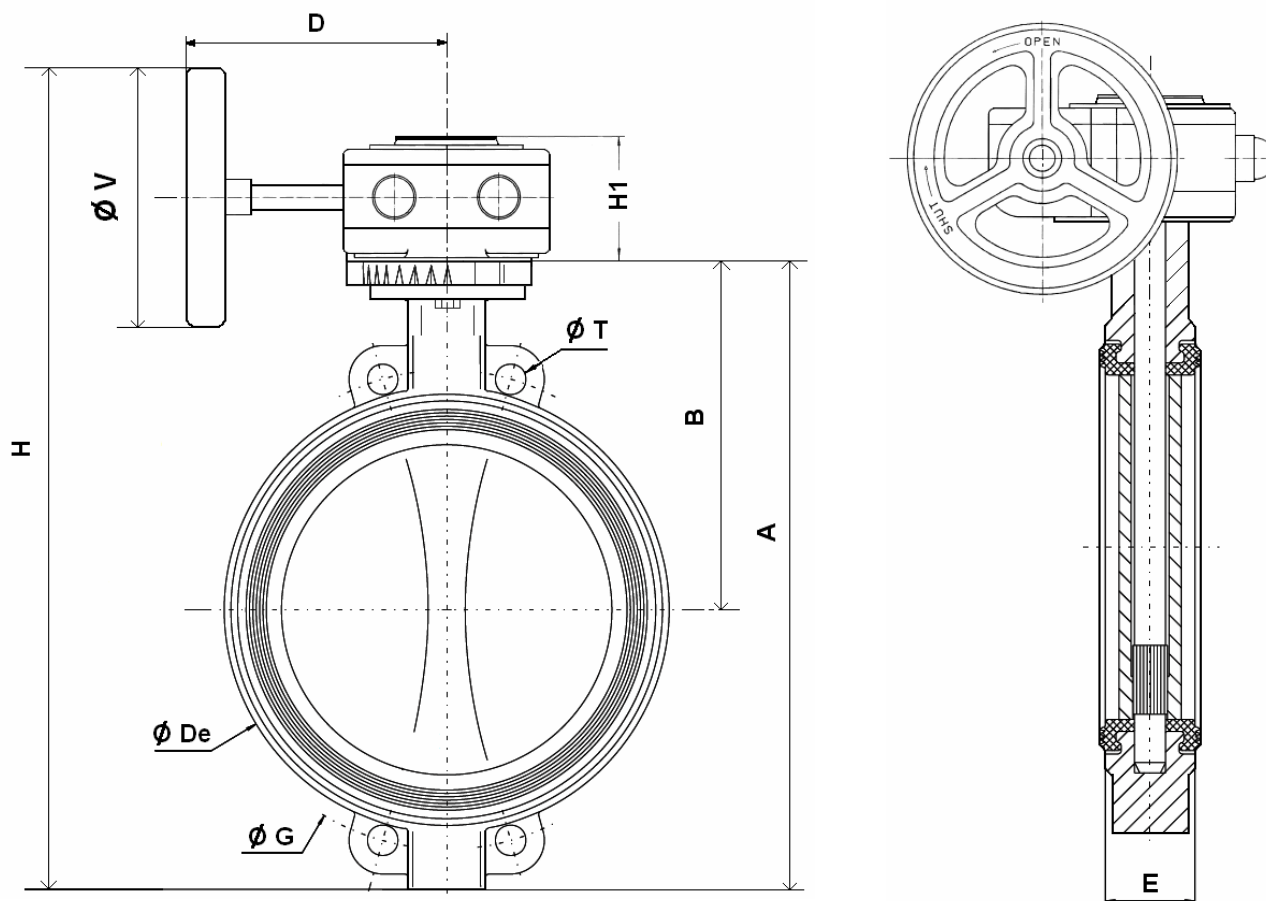


DN	450	500	600	700	750	800	900	1000	1100	1200	1300	1400
A	738	822	965	1100	1150	1248	1325	1457	1580	1720	1910	1990
B	394	440	507	575	600	655	685	754	815	873	1005	1025
Ø De	538	595	695	804	860	911	1010	1124	1225	1330	1460	1530
D	364	386	421	440	440	438	492	492	492	550	605	605
E	114	127	154	165	190	190	203	216	216	254	360	360
H	1083	1171	1376	1409	1459	1657	1688	1820	1943	2178	2260	2429
H1	90	98	122	117	117	117	125	125	125	115	178	178
Ø G	565	620	725	840	900	950	1050	1160	1270	1380	-	1590
Ø T	M24	M24	M27	M27	M30	M30	M30	M33	M33	M36	-	M39
Ø V	600	600	700	500	500	700	600	600	600	800	700	700
Weight (Kg)	105.8	143.8	215.3	307	345	381.3	579.8	735.8	914.8	1106.5	1882	2132

WAFER BUTTERFLY VALVE

SIZE GN10 (in mm) :

- Valves with chain gear box :

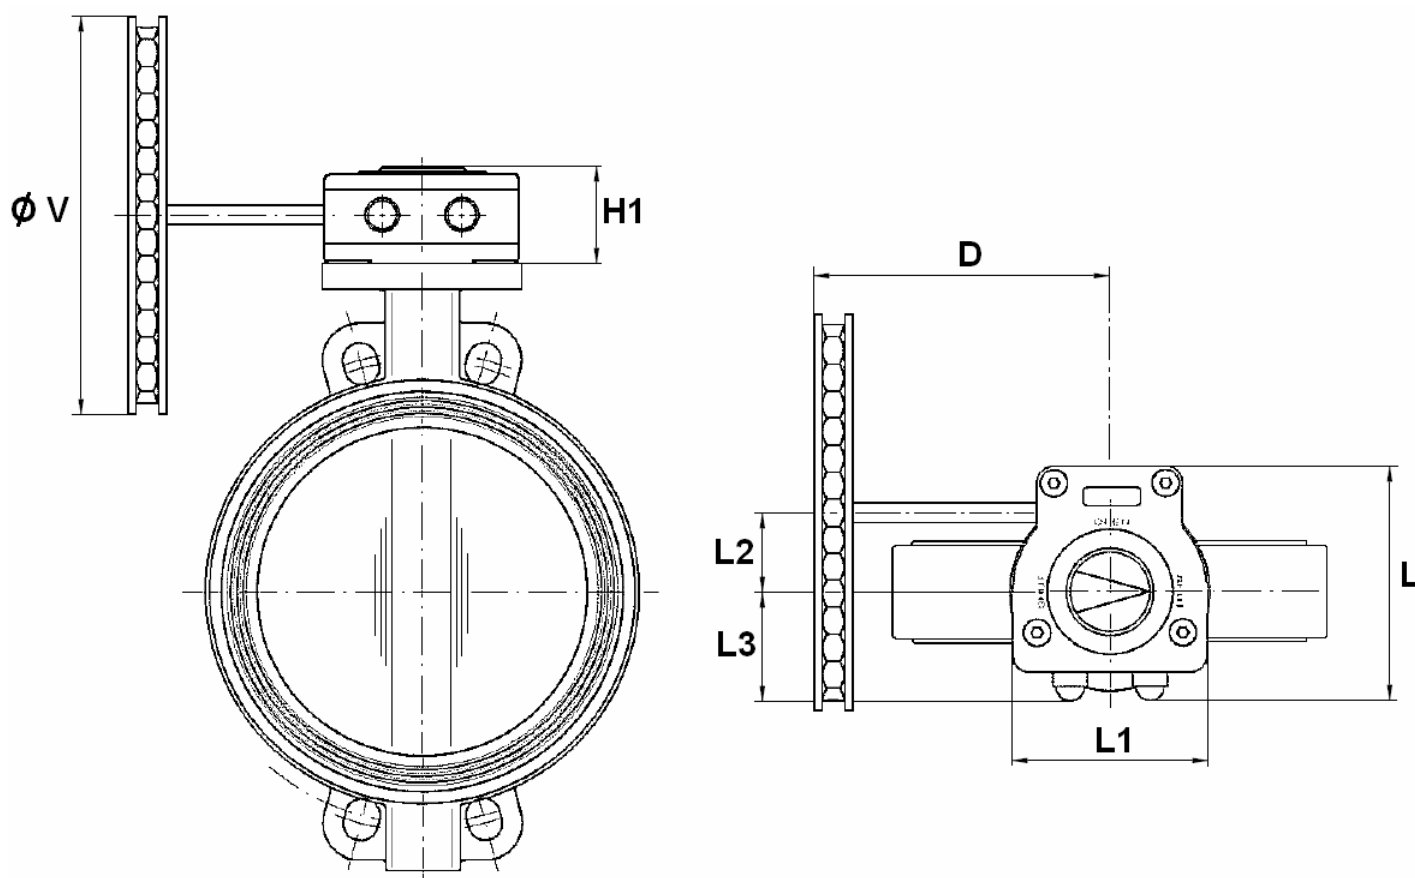


DN	32/40	50	65	80	100	125	150	200	250	300	350	400	450	500
D	120	120	120	120	120	126	126	126	214	214	331	331	350	365
H1	58	58	58	58	58	58	58	58	77	77	88	88	90	98
L	130	130	130	130	130	130	130	130	177.5	177.5	222	222	232	267
L1	100	100	100	100	100	100	100	100	146	146	175	175	204	227
L2	50	50	50	50	50	50	50	50	60	60	80	80	86	104.5
L3	58	58	58	58	58	58	58	58	82.5	82.5	85	85	100	110
ϕV	125	125	125	125	125	210	210	200	300	300	400	400	500	500
Weight (Kg)	4.81	6.01	6.75	6.95	8.35	10.35	11.95	17.45	31.5	39.8	53.3	66.3	113.2	150.7

WAFER BUTTERFLY VALVE


SIZE GN10 (in mm) :

- Stem extension for isolation (75 mm) :

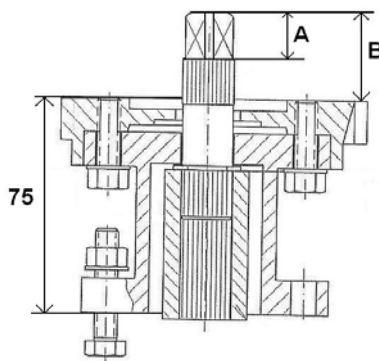

DN	32-50	65	80-100	125-150	200
A	19	19	19	17	17
B	34	34	34	34	34
Weight (Kg)	0.8	0.8	0.9	0.9	1

- Square lever for special key (30x30 mm) :

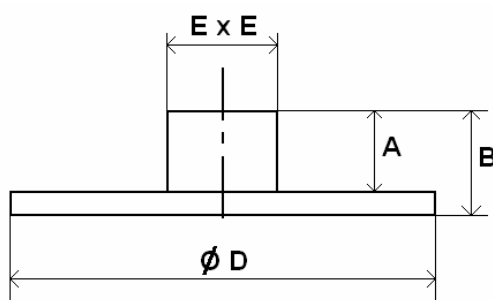


DN	32-50	65	80-100	125-150	200
A	20	20	20	20	20
B	31	31	32	32	32
Ø D	107	107	107	107	107
E x E	30 x 30	30 x 30	30 x 30	30 x 30	30 x 30
Weight (Kg)	0.88	0.88	0.88	0.88	0.88


WAFER BUTTERFLY VALVE

ISO MOUNTING PAD AND STEM SIZE (in mm) :

DN 32 – 400

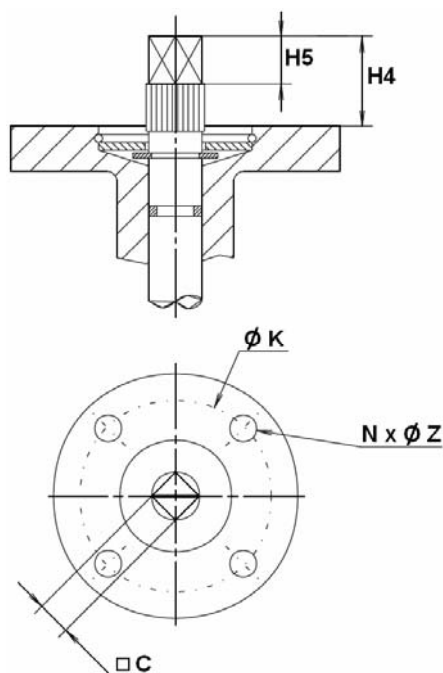

DN 450 - 1400

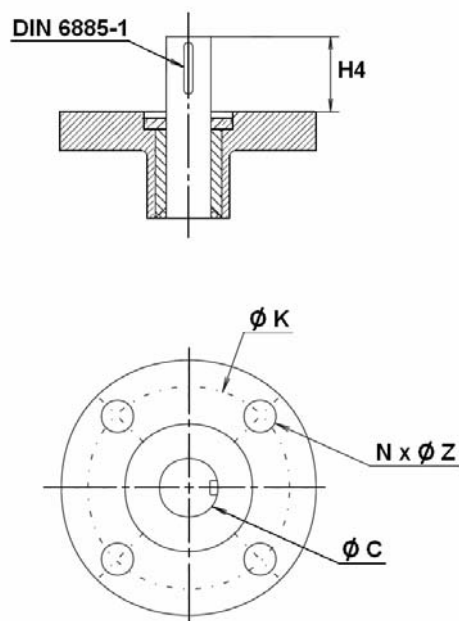

DN	32/40	50	65	80	100	125	150	200	250	300	350	400
H4	30	30	30	30	30	30	30	30	40	40	40	40
H5	17	17	17	17	17	17	17	17	20	20	20	20
C	8	8	9	11	11	14	14	17	19	22	22	27
Ø K	70	70	70	70	70	70	70	70	102	102	140	140
ISO	F07	F07	F07	F07	F07	F07	F07	F07	F10	F10	F14	F14
N x Ø Z	4 x 9	4 x 9	4 x 9	4 x 9	4 x 9	4 x 9	4 x 9	4 x 9	4 x 11	4 x 11	4 x 18	4 x 18

DN	450	500	600	700	750	800	900	1000	1100	1200	1300	1400
H4	80	80	90	90	110	110	110	110	110	110	120	120
Ø C	50	50	60	60	65	65	80	80	80	100	120	120
Ø K	140	140	165	254	254	254	254	254	254	254	298	298
ISO	F14	F14	F16	F25	F25	F25	F25	F25	F25	F25	F30	F30
N x Ø Z	4 x 18	4 x 18	4 x 22	8 x 18	8 x 18	8 x 18	8 x 18	8 x 18	8 x 18	8 x 18	8 x 22	8 x 22

WAFER BUTTERFLY VALVE

STANDARDS :

- Fabrication according to ISO 9001:2008
- DIRECTIVE 97/23/CE : CE N° 0409
Risk Category III module B + C1
- Tests according to ISO 5208
- Between flanges according to EN 1092-1 PN10
- ISO 5211 mounting pad
- Length according to ISO 5752 short series 20, BS 5155 Wafer short/medium, DIN 3202 part 3, series K1
- ATEX Group II Category 2 G/2D Zone 1 & 21 Zone 2 & 22 (optional marking)
- French water agreement **A.C.S. N° 07 ACC LY 504** for types **1150** and **1153** from **DN32 to 600**
- Approval certificate Russian **GOST-R**
- Approval certificate **Marine Lloyd's N° 99/00131** from **DN40 to 600**
- OTAN agreement (N° 286B)

ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages.
The customer must check the right choice of the products with the real service conditions.

INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES :

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- **Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).**

INSTALLATION INSTRUCTIONS :


- **Before installing the valves, clean and remove any objects from the pipes** (in particular bits of sealing and metal) which could obstruct and block the valves.
- **Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned** (if they're not, the valves may not work correctly).
- **Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will not absorb any gaps. Any distortions in the pipes may affect the tightness of the connection, the working of the valve and can even cause a rupture.** To be sure, place the kit in position to ensure the assembling will work.

Sferaco 90 rue du Ruisseau 38297 St Quentin Fallavier Tel: + 33 (0) 474.94.15.90 Fax: + 33 (0) 474.95.62.08 Internet: www.sferaco.fr E-mail : sferaco@sferaco.fr


WAFFER BUTTERFLY VALVE

INSTALLATION INSTRUCTIONS (SUITE):


- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- The valve must be inserted between flanges with disc half opened but the disc must not overpass the valve thickness. Position the bolts to keep centered the valve. Then open fully the valve and tighten the bolts. See graph under.

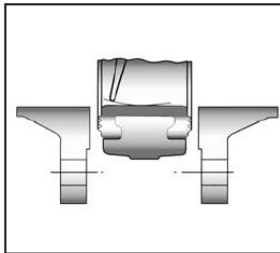

Half open valve introduction

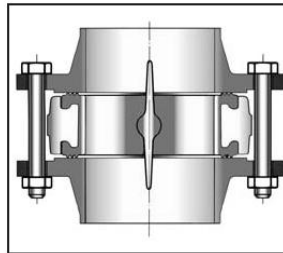

Complete opened disc valves
when screw tightening

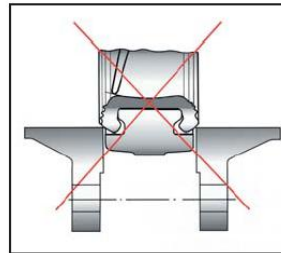

- Tighten the bolts in cross.
- The disc must move easily inside the pipe.
- Valves must be opened during cleaning operation.
- Tests must be done with a cleaned pipe.
- Tests must be done with opened valve. Test pressure must not be higher than the valve specification according to EN 12266-1.
- Then open slowly the valve.
- **Do not mount butterfly valves with stainless steel pressed collars and turning flanges.**
- **And not on flat face flanges without strias (example : painted cast iron fittings)**

MAINTENANCE :

- We recommend to operate fully the valve 1 to 2 times per year.
- During maintenance operation, ensure that the pipe isn't under pressure, that there's no fluid in the pipe and that the valve is isolated. If there's a fluid in the pipe, evacuate it. Ensure that there are no risks due to the temperature or the fluid (like acids). If the fluid is corrosive, inert the installation before maintenance operation.